


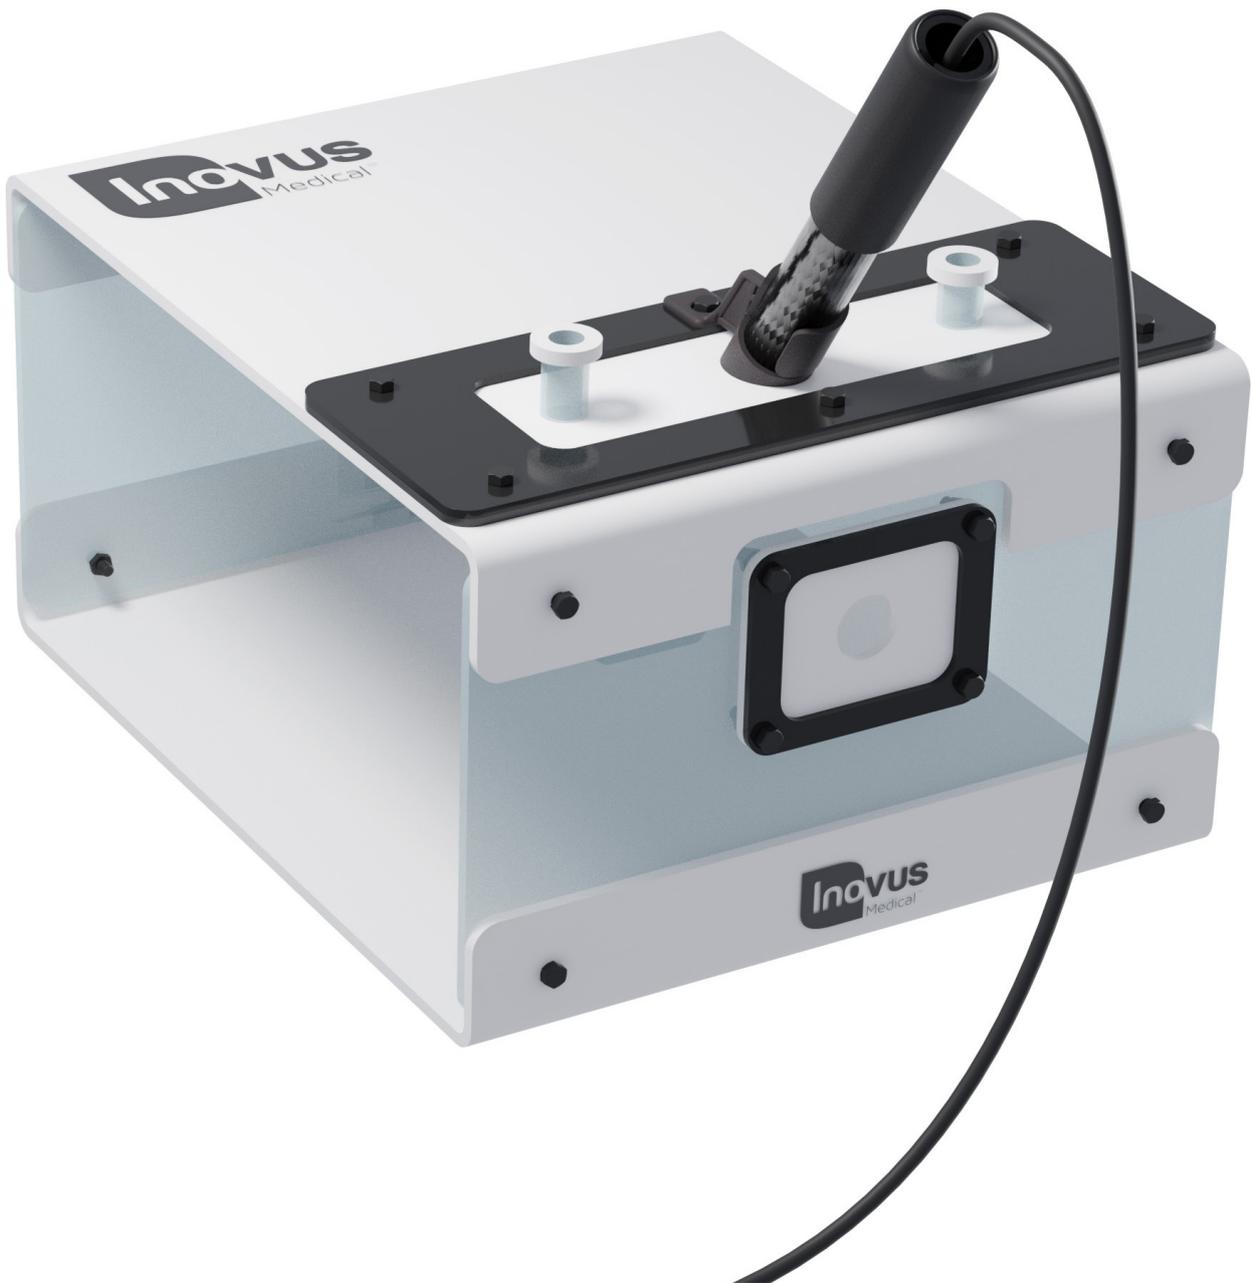


Accessible | Affordable | Functional




Pyxus HD Move Setup Manual


Product number: 00000919

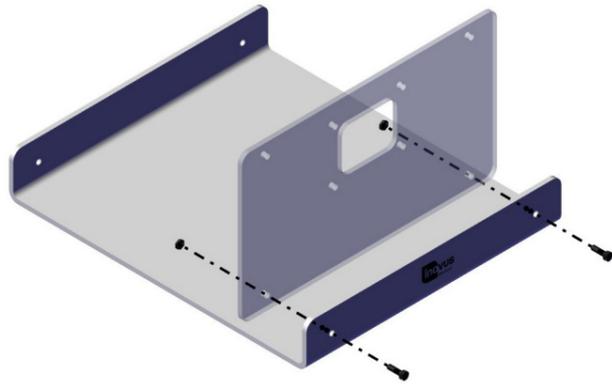

1 | Begin the assembly by taking out parts 00000917 and 00000328. Using 2 x 00000640 bolts and 2 x 00001159 nuts, screw the 00000328 panel into position as shown.

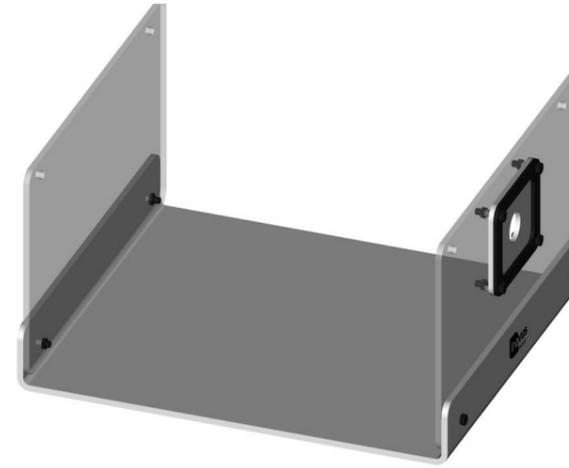

4 | Your simulator should now look like this, with both upright panels securely in position.

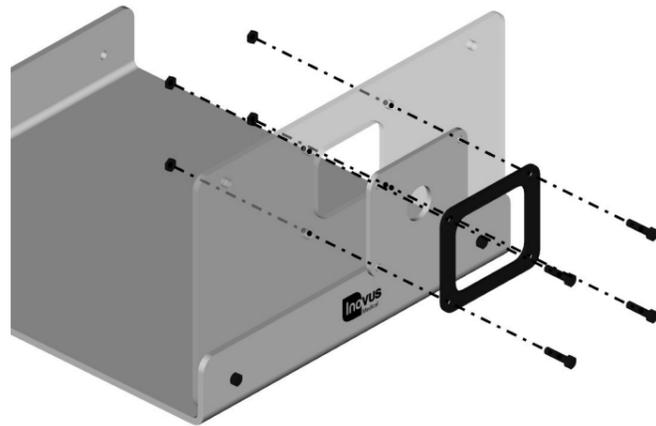


2 | You will now need the following parts:

- 00000340
- 00000339


Using the 00000640 bolts and 4 x 00001159 nuts, secure the white skin and black bracket to the 00000328 panel.

Please note that the black bracket must be placed on the outside of the white skin as shown in the image.

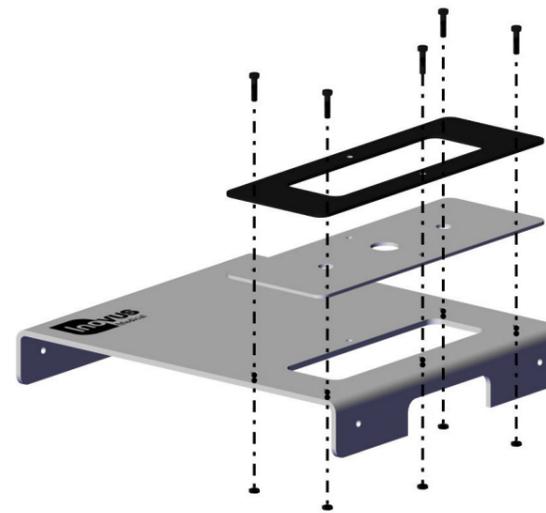

5 | You may now start the top panel sub-assembly. Taking 00001201, 00000170 and 00000171, secure as shown using 5 x 00000640 bolts and 5 x 00001159 nuts.


For the moment, leave the rear centre hole free.

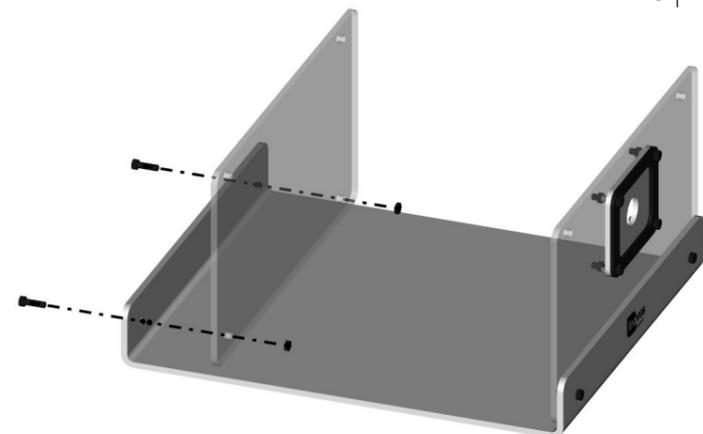


3 | Using 2 x 00000640 bolts and 2 x 00001159 nuts, secure the rear panel 00001457.



6 | You have now completed the top panel sub-assembly.

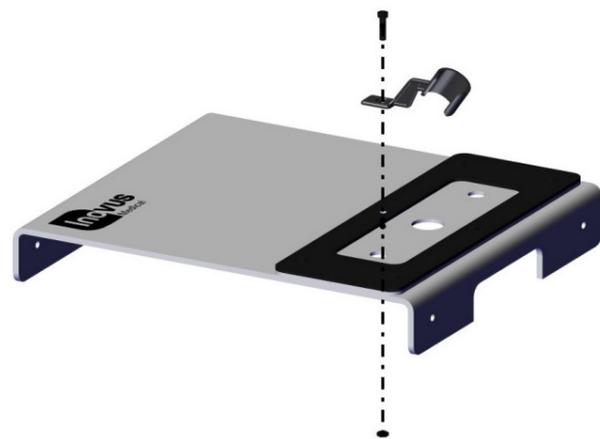

7 | Use the remaining 00000640 bolts and 1 x 00001159 nuts to position the camera bracket (00000338).

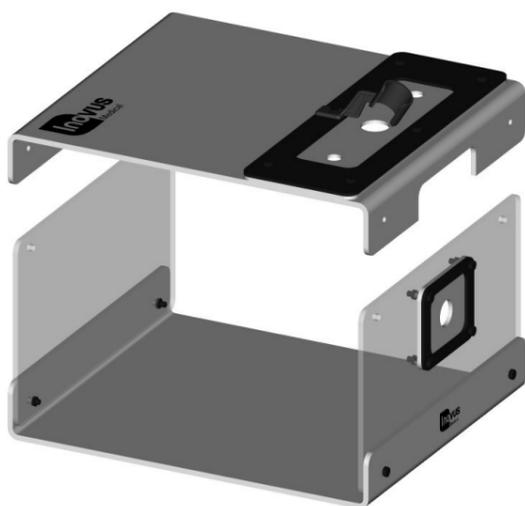


8 | Having already completed the top panel sub-assembly, you may now position it over the pre-assembled base unit.



9 | Using 2 x 00000640 bolts & 2 x 00001159 nuts, secure it to the upright panels.




10 | Your simulator should now look like this and be structurally sound.

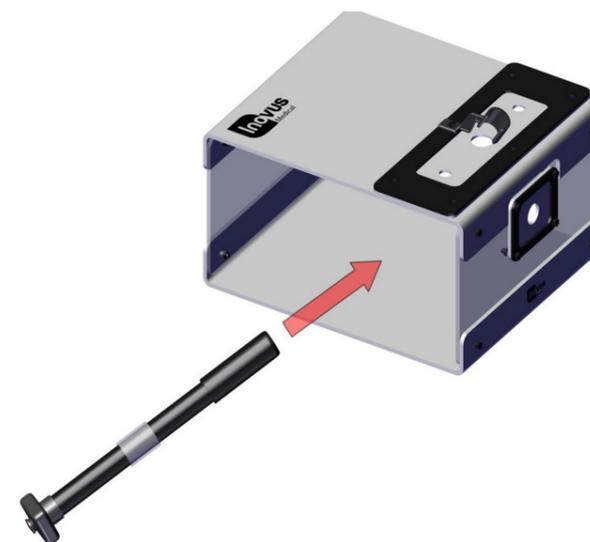

11 | You may now position the scope to begin training. The scope must be placed backwards through the ports, as illustrated. Positioning the scope in this way reduces the risk of skin tearing.

Please note you will need to thread the scope wire through the chosen port first.

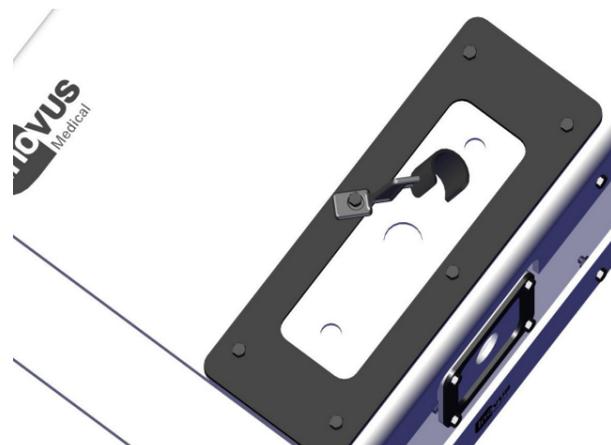


12 | You may wish to rotate the camera bracket to one side so that the scope has room to slide into position.



13 | You may now rotate the camera bracket back into position to hold the scope in place. The bracket is designed for solo training and may be removed for the purpose of training camera operators.



16 | Connect the USB cable provided to your laptop or PC. (Laptop not included)

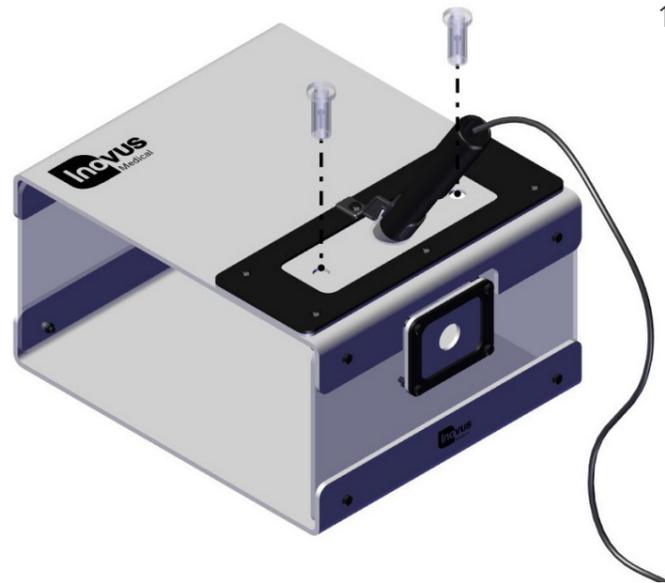

14 | Insert the two trocars provided into the openings in the 00000170 skin. Using the trocars will reduce the likelihood of the skin tearing.



17 | The setup should now look similar to this image. The lights on the scope should now be illuminated.



15 | Please note that the scope may be placed in the front port also. This will require a camera operator in most cases.

You should now be ready to start training. Should you have any problems during setup or something isn't quite working as you'd expected, please contact us at info@inovus.org or call 01744 752 952 to speak with an adviser. Opening times are Monday to Friday 9am - 5pm GMT.

Windows 8/10:

To start using your simulator immediately without the need to download software you will need to navigate to the start menu and type "camera" > Click the camera icon or symbol > At this stage your computers default camera may open up, in the event that it does look for the following icon  > Click it to change the default camera to the simulator camera. Once completed you can now begin to operate.

MAC OS X:

To start using your simulator immediately without the need to download software on your MAC you will need to click the search icon in the top right hand corner of the screen > Type Quick Time > Click the Quick Time icon > Once ready you should now have the Quick Time options appear in the top left hand corner of the desktop > Click File > New Movie Recording > At this stage the computers default camera may appear on screen > To swap the camera view to the simulator camera you must navigate to the record button > Click the down arrow the right of the button  > Select USB 2.0 Camera. Once completed you can now begin to operate.



Surgical Training Remastered

Global Headquarters
St Helens, United Kingdom
E: info@inovus.org
T: +44 (0)1744 752 952
www.inovus.org

USA Headquarters
Tampa, Florida USA
E: info@inovus.org
T: 512 481 7691
www.inovus.org

