

TOTUM

Specification requirements for Laptop or PC to run the TOTUM training software.

	Minimum specification	Recommended specification
Processor	Intel i5-13450HX	Intel i7-13650HX
Graphics Card	Nvidia RTX 3050, 6GB >	Nvidia RTX 4050, 6GB >
Memory	16GB RAM	16GB RAM
Storage	128GB HDD/SSD	128GB HDD OR SSD

Additional support requirement	
Operating System	Windows 10, Windows 11
Inovus LapAR Camera	USB 2.0 (minimum)
Inovus HystAR Camera	USB 3.1 Gen1 or USB-C (minimum)
Inovus Bluetooth Trackers	Bluetooth 5.0

* Linux (Mac) Operating Systems are not currently supported.


Surgical training remastered.

Specification check for Windows Laptop or PC

How to check Laptop spec in 4 simple steps for Compatibility

Processor & RAM

- 1) Open Settings.
- 2) Click on System.
- 3) Click on About.
- 4) Under the Device specifications section, check the processor, system memory (RAM), architecture (32-bit or 64-bit)

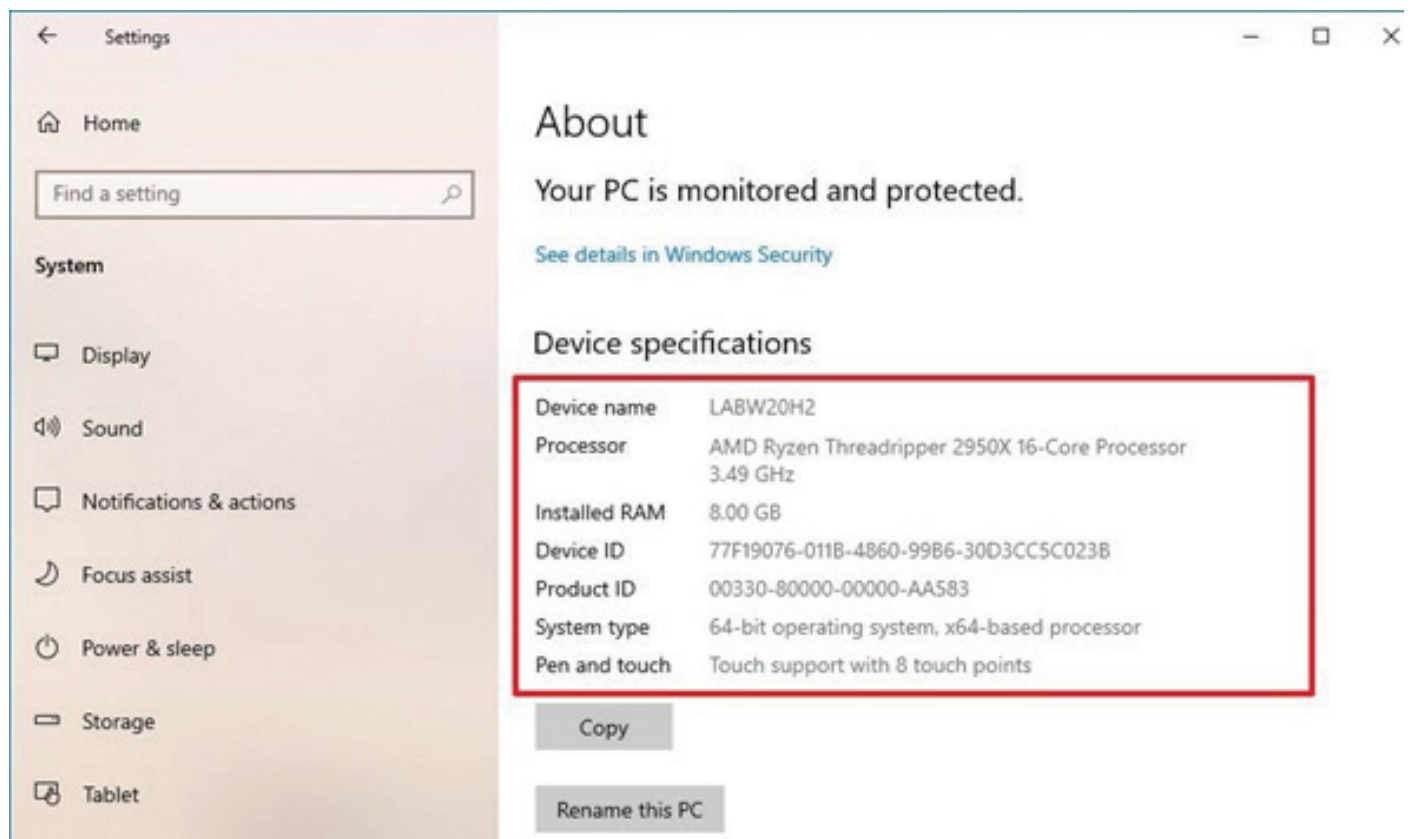


Graphics Card

- 1) Open Start.
- 2) Search for System Information and click the top result to open the tool.
- 3) Expand the Components branch on the left.
- 4) Click on Display.
- 5) Under the "Adapter Description" field, determine the graphics card in-stalled on your device.

Surgical training remastered.

Storage

1. Select the Start button, and then select Settings .
2. Select System > Storage.

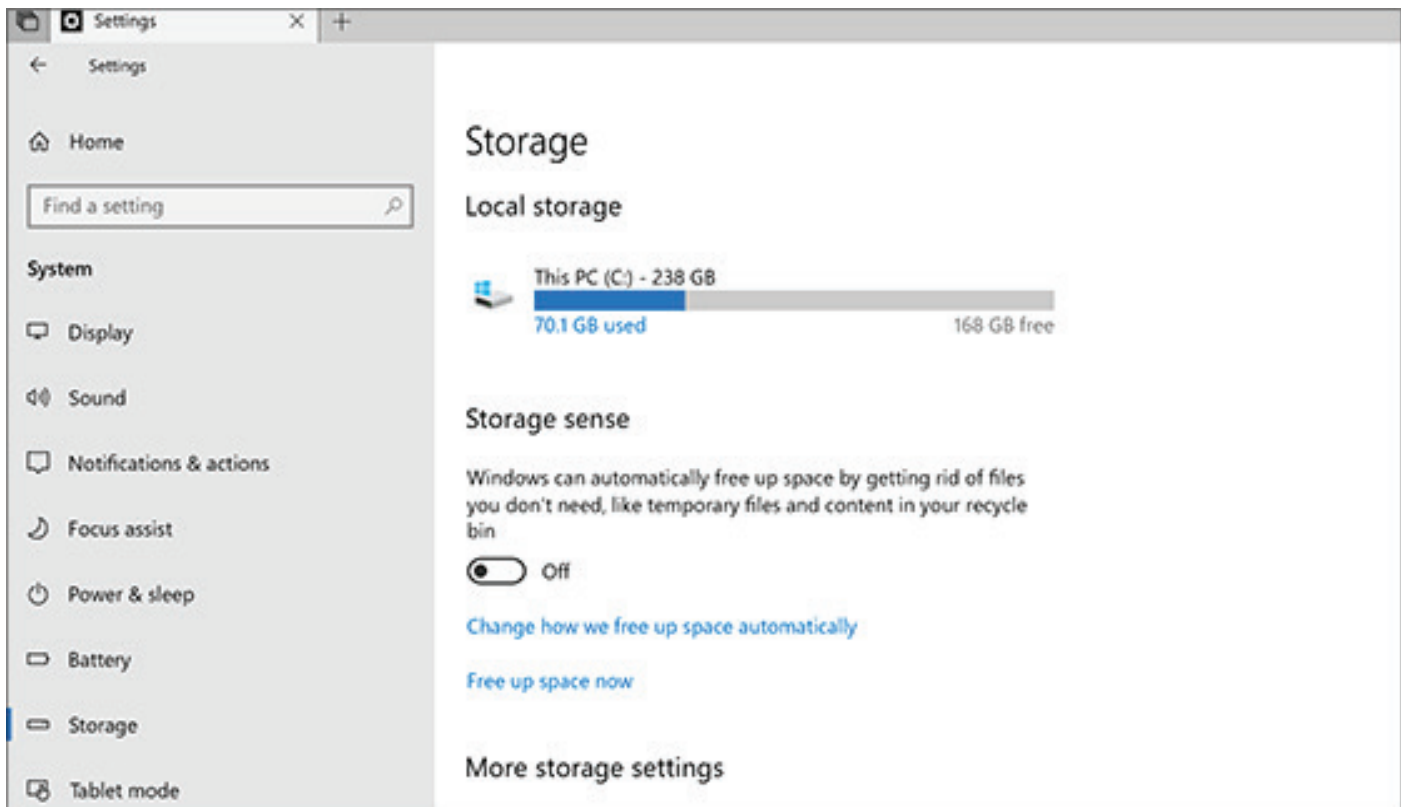

Surgical training remastered.

Global Headquarters
Level 2, Glass Futures
St Helens Linkway
St Helens
WA9 5DT
+44 (0) 1744 752 952
E: info@inovus.org

Global Manufacturing Hub
Unit 14
Wharton Street
St Helens
WA9 5AA
+44 (0) 1744 752 952
E: info@inovus.org

USA Headquarters
Suite 300
5426 Beaumont Center Blvd
Tampa
FL 33634
512-481-7691
E: info@inovus.org

